FRAME SCAFFOLDING

Straight and Vertica

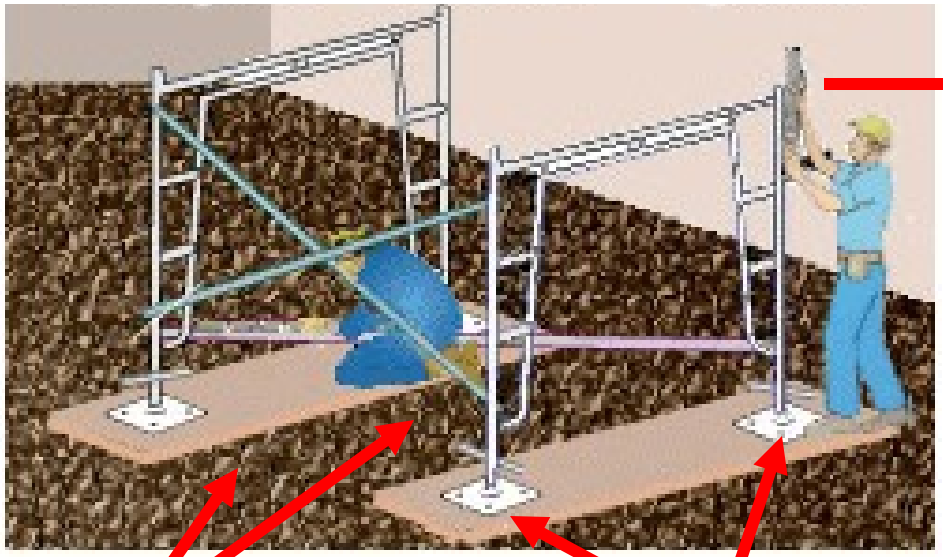

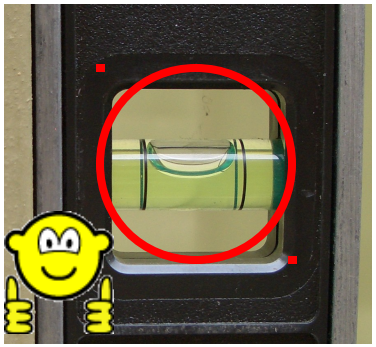

Level and Firm Ground

Metal Plates on Wood Boards

Pre-Plan Set up!

A Solid and Level Foundation is Your Key to Safety!

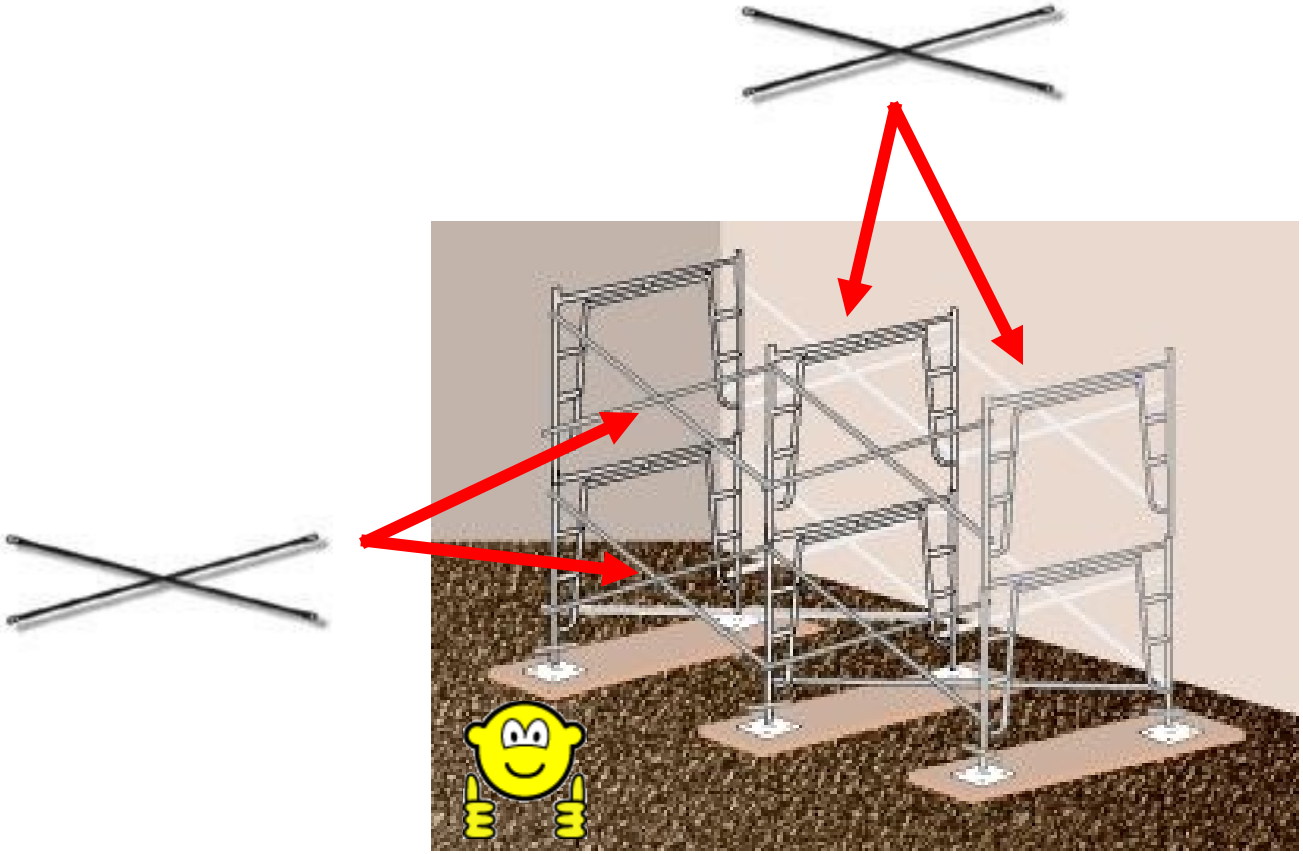

“X” Bracing Locked into Place

“X” Bracing Provides Stability

“X” Bracing on Both Sides

Fully Covered Work Area

Railings to Prevent Falls

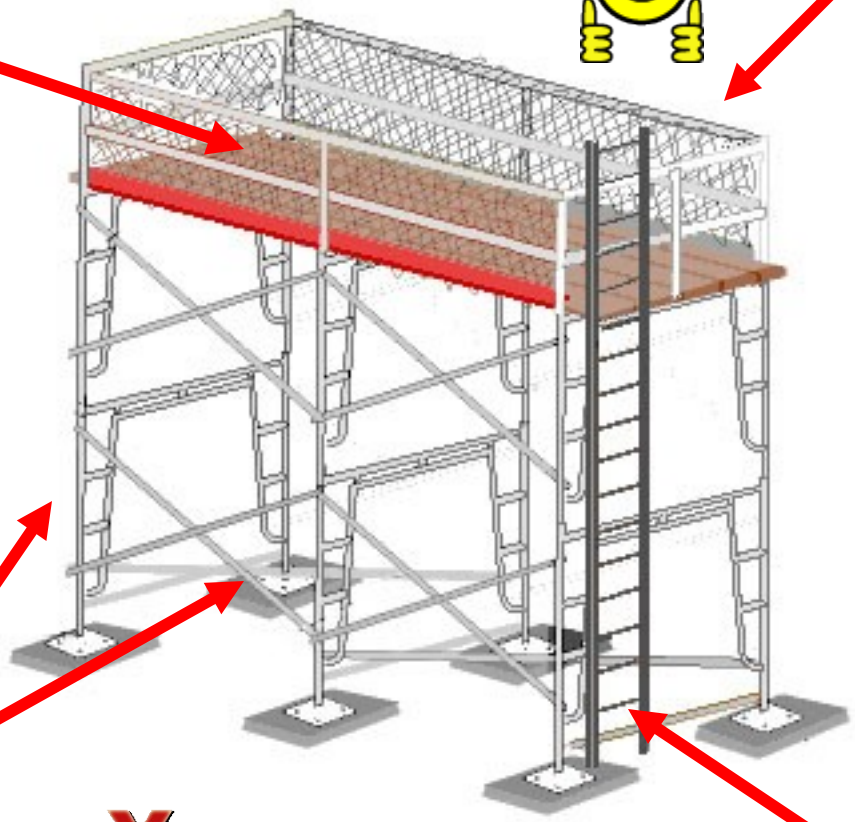

DO NOT Climb Braces

Use Ladder

SAFETY STARTS WITH YOU!

No Railings to Prevent Fall

No Fully Covered Work Area

No Ladder

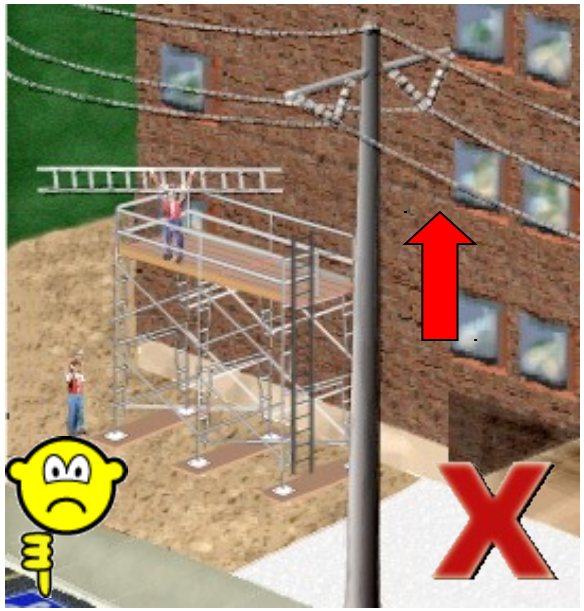

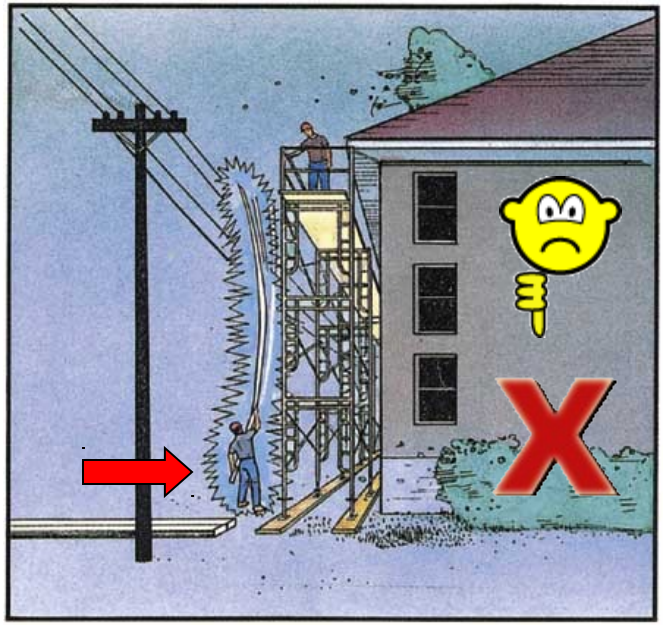

Watch Out for Overhead Power Lines!

Stay Away!

Always Look Up!

Safe Zone: 10 ft (3 m)!

Death or Serious Injury!